

Service a DVD player disc tray:

1. Open the housing by removing mounting screws and anything blocking the tray. Press the open/close control to the extend tray, then unplug the unit. To remove a clip-on tray front, brace the tray and slide the panel to one side.
2. Unplug cables between the front panel and the interior. Remove any screws securing the front panel and remove the panel. If it won't move, check beneath it for clips or additional screws.
3. Remove the hold-down on top of the disc tray and gently pull the tray out of the player. Clean the travel rail and guides with a swab dampened with denatured alcohol. Lubricate lightly with white lithium grease.
4. Remove the drive belt (using gloves or tweezers) to inspect for dirt, water, or damage. Clean with a lint-free cloth moistened with denatured alcohol. If the belt is damaged, replace it.



Remove screws from the rear of the case to remove the top and access internal components.